



PFF57-102

Apply lubricant
supplied to inside
of bushes
before fitting
sleeves

Remove original
steel outer
sleeve from
aluminium arm
before
fitting new bushes



