

# POWERFLEX®

## PART NUMBER

# PFF25-106

## DESCRIPTION

# UPPER LINK BUSHES

## INSTALLATION GUIDE

### Contents (parts per pack):

4 x Polyurethane Bushes      2 x PTFE/Silicone Grease  
4 x Stainless Steel Sleeves

*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Remove the upper wishbone/mounting bracket assembly from the vehicle.
2. Undo the two mounting bolts to separate the mounting bracket from the wishbone. The OEM bushes are located on the mounting bracket, rather than the wishbone.
3. Using a press and suitable adapters, push the original bushes out of the mounting bracket, including the metal outer shells.
4. Use a wire brush to remove any dirt and corrosion around the bores of the mounting bracket and the mating faces on the wishbone.
5. Push the polyurethane bushes into the mounting bracket from the outside, with the flats facing upwards at 45 degrees towards the threaded bar and outside of the car (See Figures 1 and 2).
6. Apply the supplied grease liberally to both ends and the bore of the polyurethane bushes, the outside of the stainless steel sleeves and to the inside mating faces of the wishbone.
7. Push the mounting bracket - with the bushes fitted - into place on the wishbone, and refit the nuts and bolts.
8. Refit the assembly to the car, and tighten all hardware to manufacturers recommended torque settings.



Figure 1

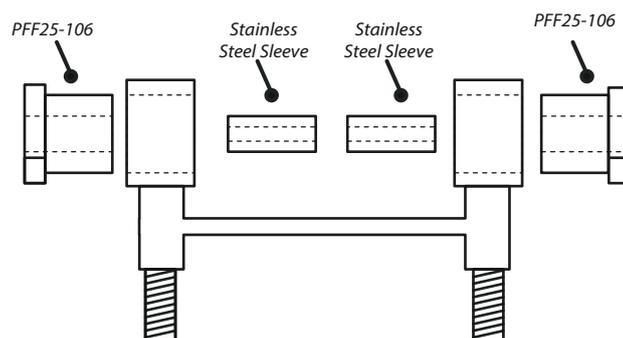


Figure 2



Figure 3

