

# POWERFLEX®

PART NUMBER

**PFF5-8002**

DESCRIPTION

**FRONT WISHBONE REAR BUSH**

## INSTALLATION GUIDE

### Contents (parts per pack):

- 4 x Polyurethane Bushes
- 1 x Grease
- 2 x Stainless Steel Sleeves
- 4 x Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Remove the wishbone from the car.
2. Press out the original bush from the wishbone.
3. Clean any corrosion or dirt out of the bore.
4. Insert the two polyurethane parts into the mount.
5. Apply some of the supplied grease into the bore of the bush.
6. Push in the stainless steel sleeve.
7. Offer the mount back up to the car, and place the washers in between the bush and the subframe, some more grease may be used to help the washers stick to the bush.
8. Push the bolt through and tighten. Tension all hardware to manufacturers recommended torque settings.

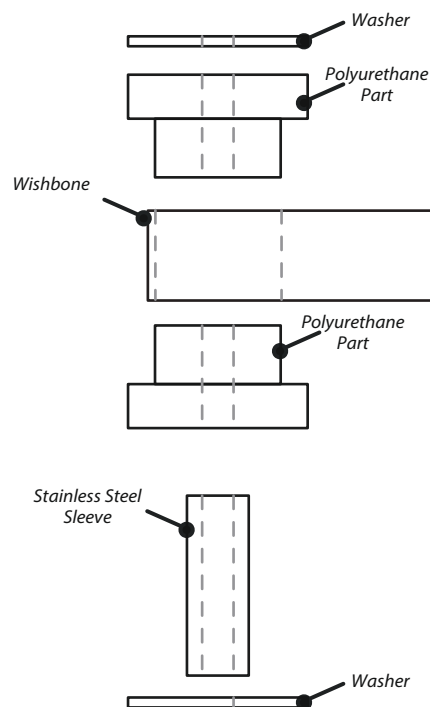


Figure 1 - diagram showing how all the parts fit together