



PART NUMBER

PFF60-1120

DESCRIPTION

FRONT STRUT TOP MOUNT

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane Bushes

1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

Fitting Instructions:

1. Remove the front strut from the car and use a suitable spring compressor to remove the tension from the top mount.
2. Remove the original rubber bush from the front strut, but retain the original hardware for refitting.
3. Clean off any dirt and corrosion from around the strut and inner wing.
4. Fit the polyurethane top mount onto the strut with the exposed washer facing down onto the strut, as shown in figure 1.
5. Refit the front strut to the car, and tension all hardware to manufacturers recommended torque settings.

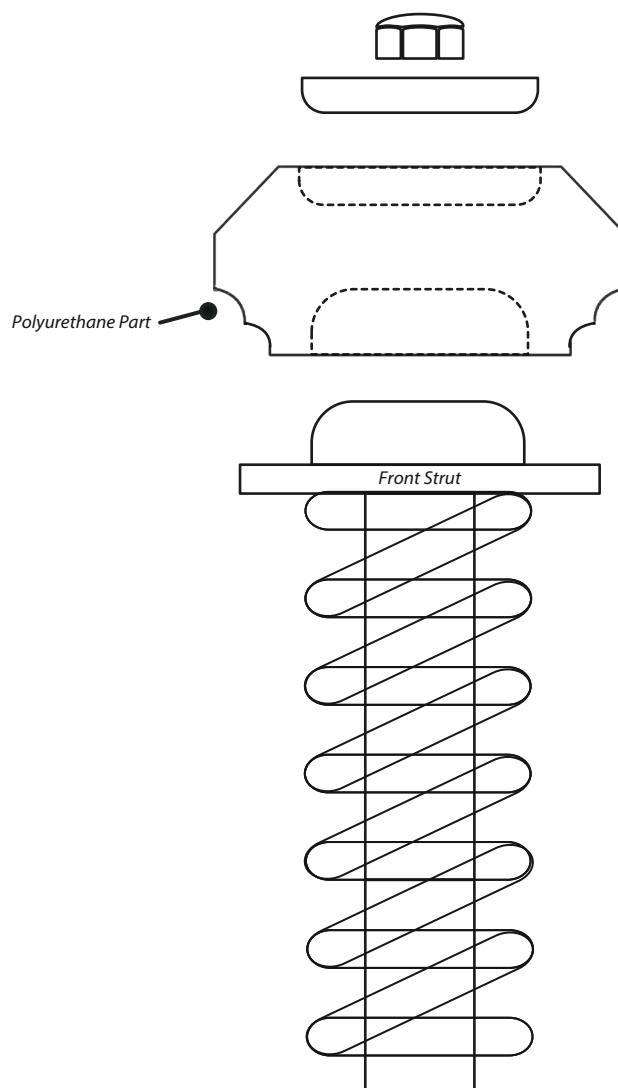


Figure 1